Rev C/2015/05/05/SF-433DSCA/DH

IL-6 Hu-Cyanine 3 SmartFlare™

RNA Detection Probe

Cat. # SF-433

pack size: 50µL (250 rxns)

Store at 2-8°C, after reconstitution store at 23-27°C DO NOT FREEZE

FOR RESEARCH USE ONLY NOT FOR USE IN DIAGNOSTIC PROCEDURES NOT FOR HUMAN OR ANIMAL CONSUMPTION



Product Data Sheet

page 1 of 1

Validated Accession # NM_000600.3

Species Hu

Gene Aliases HGF, HSF, BSF2

Confirmation of IL-6 SmartFlare Performance:

IL-6 SmartFlare has been tested in a buffer system to detect the release of the fluorophore in the presence of a complementary base pair sequence for each lot to confirm target specificity.

IL-6 SmartFlare has also been tested in a cell model system and demonstrated increased fluorescence in cells expressing the target compared to a scrambled negative control SmartFlare (Figure 1). For additional accession numbers predicted to react with this SmartFlare Probe, please visit http://www.millipore.com/catalogue/item/SF-433

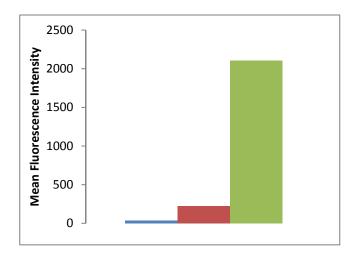


Figure 1: IL-6 Mean Fluorescence Intensity (green) measured by flow cytometry in living MDA-MB-231 cells demonstrated a significant increase over unflared cells (blue) as well as scramble control (red). Data shown in graph is representative.

Storage and Handling:

Material has been 0.22µm filtered. Stable for 5 years at 2-8°C degrees in lyophilized format ONLY. Room temperature is required for reconstituted product.

Warning-after reconstitution product is sensitive to cold and hot temperatures, a stable room temperature of 23-27°C is required.

Handling Recommendations:

Reconstitute with sterile nuclease free water in a drop wise fashion and tap tube repeatedly to fully dissolve lyophilized material. Vortex for 5-10 sec.

Upon reconstitution, store at room temperature for up to 1 year protected from light. Product must be handled with gloves as product can be absorbed through the skin.

Recommended Cell Testing Protocol:

(example: 30,000 cells in a 200µL media volume within each well of a 96 well plate)

- Reconstitute reagent in 50µL of sterile nuclease free water.
- Create a working solution based on your experiment by diluting 1:20 in sterile PBS.
- Add 4µL directly to cells (at approx 80% confluency).
- Allow to incubate overnight for 16 hrs.
- Detect using fluorescence detection platform of choice.



We Buy 100% Certified Renewable Energy