



DL360 UltraLite™ PF ZERO Long Length (41"), Fluid Resistant Lab Coat with UltraLite™ Fabric **NEW** Front and Back for Wearer Comfort.

*Use where Fluid Resistance is required to Meet OSHA, and
Employee Comfort is a Priority.*



DL360 UltraLite PF ZERO is Environmentally Friendly, PFOS and PFOA Free. PF ZERO Fabric is treated with non-fluorinated aqueous repellent chemistry where PFAS substances* are not intentionally added.

* Based on the PFAS Test Method Minimum Detection Limit

① User Protection from Incidental Splash

- 360° to Front, Arms, Splash Past Face to Shoulders & Upper Back
- Tested AAMI PB70 Level 2 Front & Back
- Repels Blood, Saliva, Other Infectious Matter



View Coats in Medical Lab or Dental Applications at
DenLine.com/Medical
DenLine.com/Dental

② User Comfort

**35 Cu. Ft./Min
Air Permeability** (ASTM D 737)

- Employee Comfort contributes to Employee Productivity, Compliance to OSHA.

③ Sanitizing Laundry Process

- Designed for Laundering Using Home Style, Laundromat, or Commercial Laundry Equipment.
- Wash Formulas Provided Meet CDC/HICPAC Recommendations for Processing Medical Bloodborne Linen.

④ Autoclavable Fabric (274°F/135°C)

⑤ Static Control

Surface Resistivity (Test Method 76) 10⁷
Static Decay (FTMS 4046-101 C) < 1.0 sec.

- Prevents False Instrument Readings & Damage to Computers and Computerized Instruments.

⑥ Lint Free Fabric

- Continuous Filament Yarns
- Tested Clean Room Level ISO 5 (Class 100).
- Prevents Sample Contamination, Suitable for Molecular Testing.

⑦ Construction

Snap Closures: "Lifetime Guaranteed," Heavy Duty, Stainless Steel.


Cuffs: Durable, Spun Woven, "Low Pill" Polyester, Comfortable, "Quick Dry" if Wet, Stain Resistant.

Vents at Hips: Increases Air Circulation to Upper Body. Minimizes Tendency to "Ride Up" when Seated.

Pockets: "No Failure" Stitching. Double Stitched, Bar Tack Reinforced Top Corners.




90° Corners at Pocket Bottom – Prevents "Punch Out" of Corners.

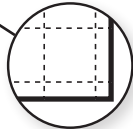

⑧ Appearance

Stain Resistant – Repels Blood, Bleach and All Aqueous Liquids.

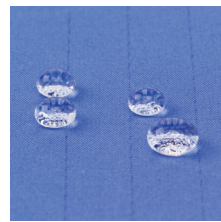

Bleach

⑨ 200+ Wash Rated

- Industry's Lowest Lifetime Cost Per Wash

Style	DL360 UltraLite™ PF ZERO
Length	41"
Size Range	XS-5XL
Colors	 Royal  Black

DENLINE®
Uniforms, Inc.

301 Oak Street • Quincy, IL 62301
Phone 800-336-5463 • 217-228-9272
Fax 217-228-8825
customerservice@denlineuniforms.com
www.denlineuniforms.com