


## DL360 UltraLite Long Length (41"), Fluid Resistant Lab Coat with UltraLite™ Fabric **NEW** Front and Back for Wearer Comfort.

Use where Fluid Resistance is required to Meet OSHA, and Employee Comfort is a Priority. Ideal for ALL Dental, most BSL-2 Medical Lab Applications, and All Quasi Clean Rooms where ESD Lab Coat Styles are used.



### ① User Protection from Incidental Splash

- 360° to Front, Arms, Splash Past Face to Shoulders & Upper Back
- Tested AAMI PB70 Level 2 Front & Back
- Repels Blood, Saliva, Other Infectious Matter

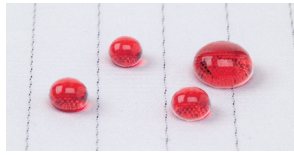

View Coats in Medical Lab or Dental Applications at  
[DenLine.com/Medical](http://DenLine.com/Medical)  
[DenLine.com/Dental](http://DenLine.com/Dental)

### ② User Comfort 35 Cu. Ft./Min Air Permeability (ASTM D 737)

- Employee Comfort contributes to Employee Productivity, Compliance to OSHA.

### ③ Sanitizing Laundry Process

- Designed for Laundering Using Home Style, Laundromat, or Commercial Laundry Equipment.
- Wash Formulas Provided Meet CDC/HICPAC Recommendations for Processing Medical Bloodborne Linen.

### ④ Autoclavable Fabric (274°F/135°C)

### ⑤ Static Control

Surface Resistivity (Test Method 76) 10<sup>7</sup>  
Static Decay (FTMS 4046-101 C) < 1.0 sec.

- Prevents False Instrument Readings & Damage to Computers and Computerized Instruments.



### ⑥ Lint Free Fabric

- Continuous Filament Yarns
- Tested Clean Room Level ISO 5 (Class 100).
- Prevents Sample Contamination, Suitable for Molecular Testing.


### ⑦ Construction

**Snap Closures:** "Lifetime Guaranteed," Heavy Duty, Stainless Steel.


**Cuffs:** Durable, Spun Woven, "Low Pill" Polyester, Comfortable, "Quick Dry" if Wet, Stain Resistant.

**Vents at Hips:** Increases Air Circulation to Upper Body. Minimizes Tendency to "Ride Up" when Seated.

**Pockets:** "No Failure" Stitching. Double Stitched, Bar Tack Reinforced Top Corners.

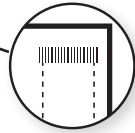


90° Corners at Pocket Bottom – Prevents "Punch Out" of Corners.

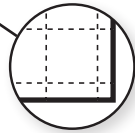

### ⑧ Appearance

**Stain Resistant** – Repels Blood, Bleach and All Aqueous Liquids.

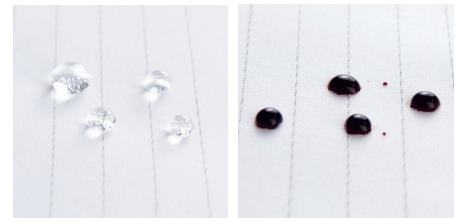

Bleach

Iodine

### ⑨ 200+ Wash Rated

- Industry's Lowest Lifetime Cost Per Wash

UltraLite™ Styles	DL360	DL360NP*
Length	41"	41"
Size Range	XS-5XL	XS-5XL
Colors	White            Ceil            Royal            Black	White            Black