



# DL361 UltraLite™ Unisex Mid-Length (34"), Fluid Resistant Lab Jacket **NEW**

Designed for BSL-1 and BSL-2 Medical Laboratory, Dental  
and Quasi-Clean Room ESD Applications



**DL361**  
**Length: 34"**  
**Sizes: XS-3XL**

### Color Choices




DenLine Protection Plus® <b>AAMI PB70 Level 2 Fluid Resistance With Comfort</b>		
<b>DL361 UltraLite</b>		
Fabric	Front	Back
DenLine® Fluid & Stain Resistant Fabric. 99% Polyester/1% Carbon	<b>NEW</b> UltraLite™	<b>NEW</b> UltraLite™
Fluid Resistance – Designed for Incidental Splash of Blood & OPIM, All Aqueous Liquids		
Areas of Body Protected – 360° Front & Back	Yes	Yes
Bio Safety Level Protection	BSL-1 & BSL-2	BSL-1 & BSL-2
<b>AAMI PB70 Liquid Barrier Level</b>	<b>2</b>	<b>2</b>
Hydrostatic Pressure (AATCC 127)	>27.5 cm	>27.5 cm
Impact Penetration (AATCC 42)	<1.0 (g)	<1.0 (g)
Comfort – Air Permeability, Measured in Cubic Feet /Min.(CFM) Air Flow		
Front and Back Fabrics	35.0 CFM	35.0 CFM
Overall Coat Average	35.0 CFM	
Comparable to This % Poly/Cotton	55/45	

### Style Features...

Fabric	Front	Back
DenLine® Fluid & Stain Resistant Fabric. 99% Polyester/1% Carbon	<b>NEW</b> UltraLite™	<b>NEW</b> UltraLite™
Fluid Resistance – Designed for Incidental Splash of Blood & OPIM, All Aqueous Liquids		
Areas of Body Protected – 360° Front & Back	Yes	Yes
Bio Safety Level Protection	BSL-1 & BSL-2	BSL-1 & BSL-2
<b>AAMI PB70 Liquid Barrier Level</b>	<b>2</b>	<b>2</b>
Hydrostatic Pressure (AATCC 127)	>27.5 cm	>27.5 cm
Impact Penetration (AATCC 42)	<1.0 (g)	<1.0 (g)
Comfort – Air Permeability, Measured in Cubic Feet /Min.(CFM) Air Flow		
Front and Back Fabrics	35.0 CFM	35.0 CFM
Overall Coat Average	35.0 CFM	
Comparable to This % Poly/Cotton	55/45	

Appearance
Stain Resistant - Repels all Aqueous Liquids (Blood, Bleach, Reagents)
<b>NEW Black Color</b> - Masks Ink and Marker Stains
Wrinkle Resistant Fabrics
Static Control
Surface Resistivity (Test Method 76) 10 <sup>7</sup>
Static Decay (FTMS 4046-101 C) < 1.0 sec.
Lint Free
Tested Clean Room ISO 5 (Class 100) – Suitable for Use in Clean Rooms

Construction
<b>Pockets:</b> "No Failure" Stitching. Double Stitched, Bar Tack Reinforced Top Corners.
90° Corners at Pocket Bottom – Prevents "Punch Out" of Corner Stitching During Life of Coat.
<b>Snap Closures:</b> "Lifetime Guaranteed," Heavy Duty, Stainless Steel.
<b>Cuffs:</b> Durable, Spun Woven, "Low Pill" Polyester, Comfortable, "Quick Dry" if Wet, Stain Resistant Finish.
Durability
Tested 200+ Commercial Wash and Dry Cycles
7.7 Year Coat Life at 26 washes/year

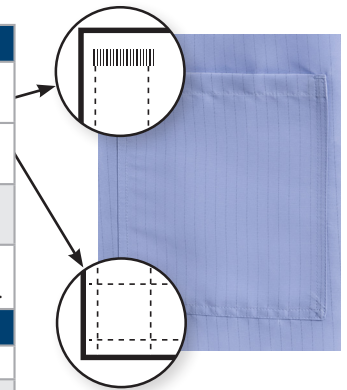

Wash Protocol - Same Across All DenLine Styles
Temperature: Hot Water (160°F/71°C)
Hot & Warm Water Sanitizers Acceptable
Steam Tunnel Finish (260°F to 295°F)
Gas Dryer Warm Temp to 160°F
Autoclavable (274°F/135°C)



301 Oak Street • Quincy, IL 62301  
Phone 800-336-5463 • 217-228-9272  
Fax 217-228-8825  
customerservice@denlineuniforms.com  
www.denlineuniforms.com